

TFTP Update

Test Soft

Hyper Terminal

Press <space> key tree times to enter boot menu..

0

Loader Menu

- [1] Xmodem Download
- [2] TFTP Client Download
- [3] Print Boot Params
- [4] Set Boot Params
- [5] Update bootloader
- [6] Exit

Step 1

Reset Adapter · Press <space> into Loader Menu

Please enter your number:2 ←-----into TFTP

Server IP: 192.168.16.10

Remote File: nv600r_1496.dat

IP address for this board : 192.168.16.248

TFTP Client Menu

- [D]: start download
- [S]: set parameters
- [X]: exit

Enter your option : s←-----TFTP Setup

Please Enter TFTP Server IP : 192.168.16.10←-----TFTP Server

Enter Remote File Name : NV-600R_30a.dat ←-----firmware file name

IP updated successfully.

TFTP Client Menu

- [D]: start download
- [S]: set parameters
- [X]: exit

Enter your option : D←-----Start Update

Update finish must be reset, Enter command in Loader Menu

#rawaccess -e <Set to Default>